


## Supplemental Supplies Needed



Installation Bit



Installation Tapcon

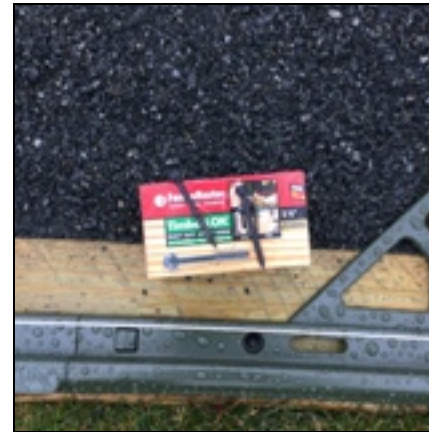

Stone Base 8.25 in. Timber Screw



Drill hole through grommet hole to secure frame



Screw in Tapcon 1.25 in.